

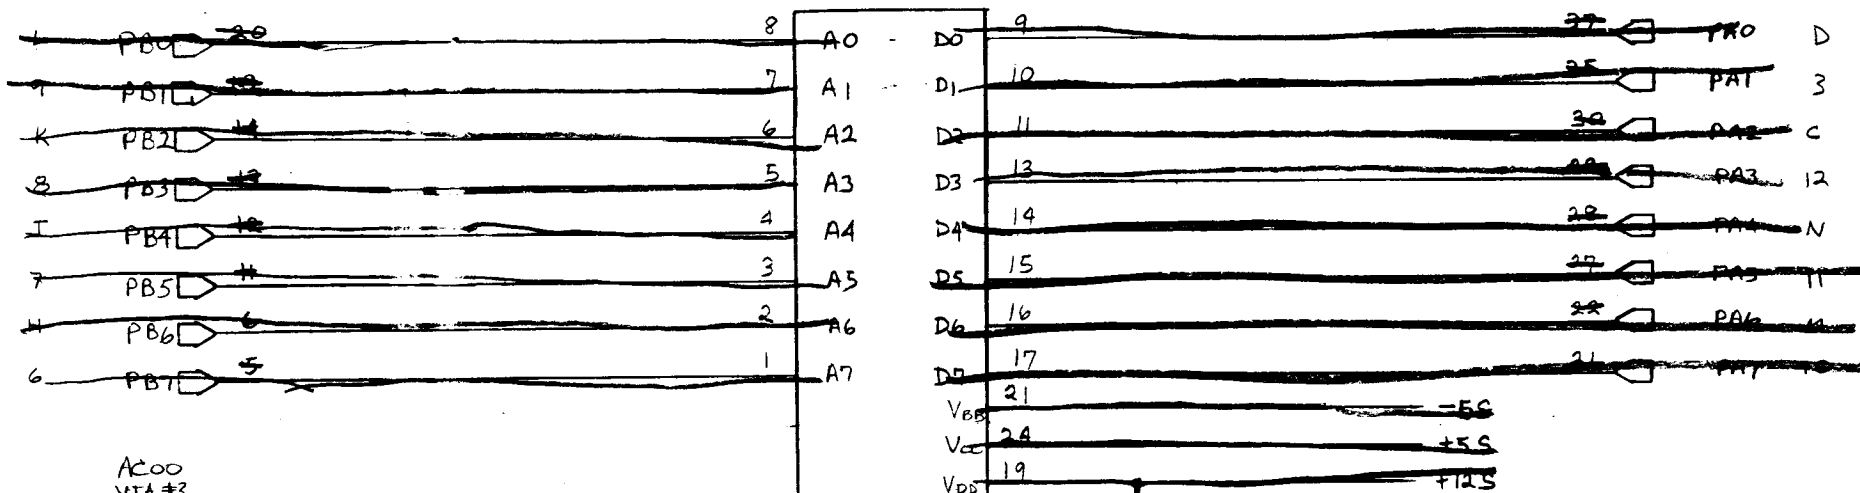


A800
VIA#2

A801
VIA#2

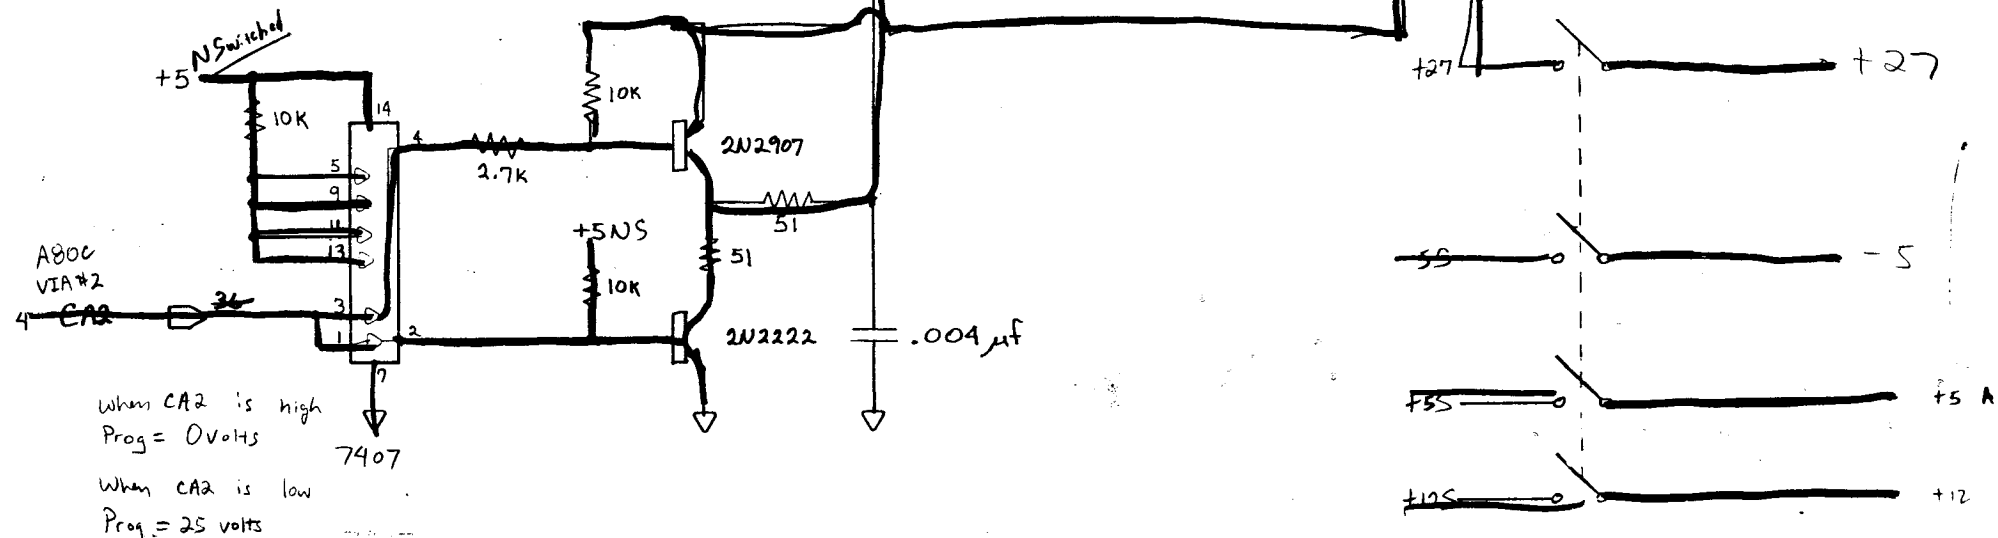

A800
VIA#3



When CA2 is high
Prog = 0 volts
When CA2 is low
Prog = 25 volts

OK
10-15-82

