


# SYMDOS 2


4-2-86 Add interface to F310 board

3-19-86

4-2-86 Re-address 6551 to add 7170

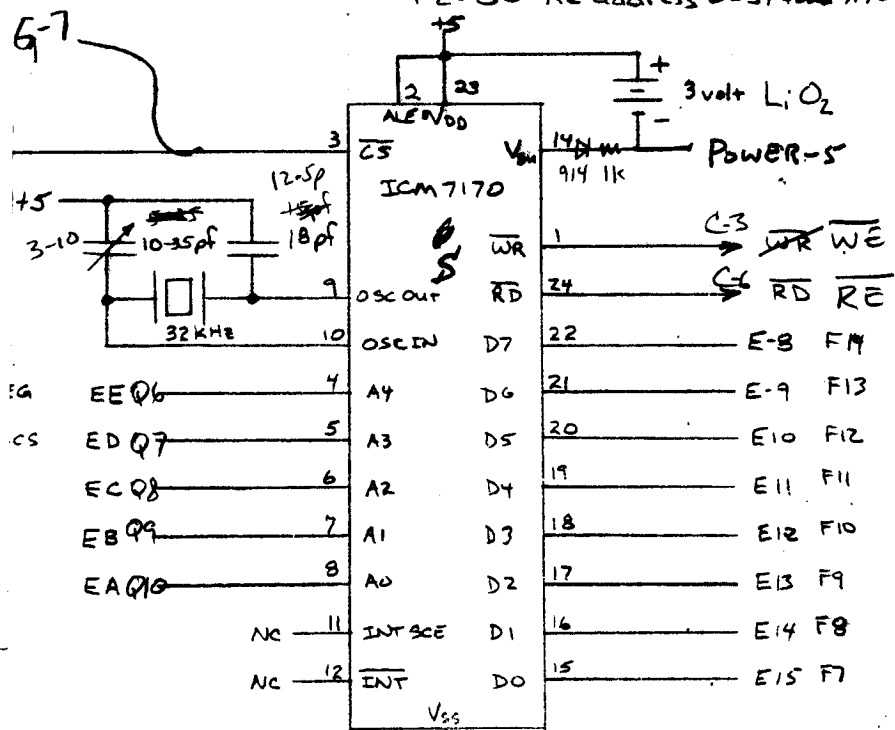

F310

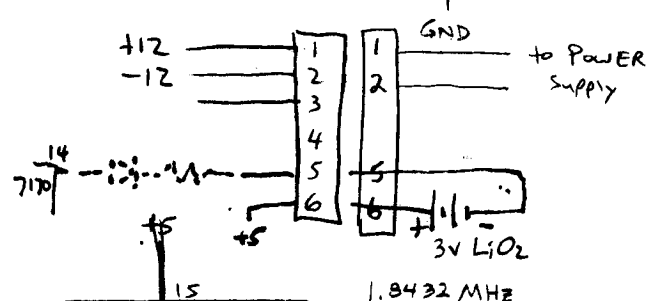

Red Berg DB25

8	8
7	2
6	3
5	4
4	5
3	16
2	7
1	20

"E"

